


EN NUVITA BOTTLEWARMER 1160

INTRODUCTION

Congratulations on your purchase of this bottle warmer that can be used everywhere because it operates with HOME power and CAR power. The large size makes it possible to heat bottles up to 8 cm wide and it is possible to heat with water (home) or dry (car).


Operation is simple: just turn the knob to position 3 and the bottle warmer starts and it will take around 6-7 minutes to heat the drink. To maintain the temperature turn the knob to position 2. Before you start using this appliance, please read the instruction manual and retain it for future reference.

DESCRIPTION

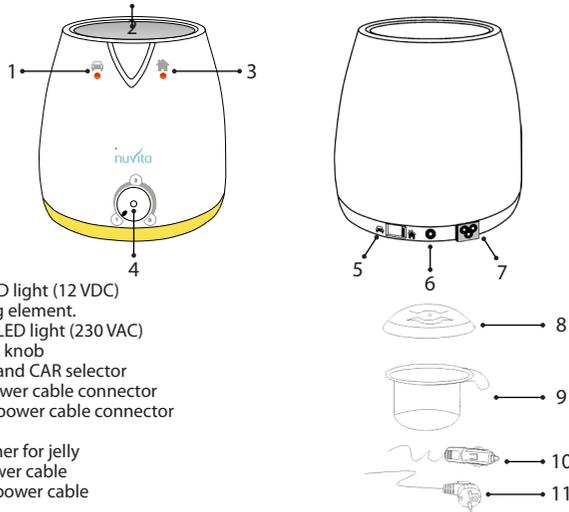

- CAR LED light (12 VDC)
- Heating element.
- HOME LED light (230 VAC)
- Control knob
- HOME and CAR selector
- CAR power cable connector
- HOME power cable connector
- Lid
- Container for jelly
- Car power cable
- Home power cable

MANOPOLA DI CONTROLLO

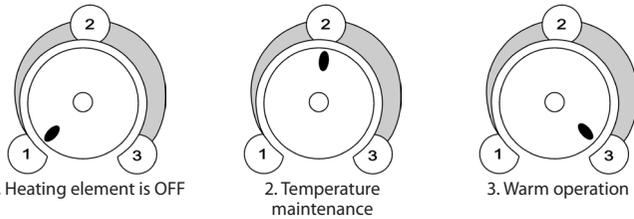

- During the preparation of the drink, or when not using the appliance, ensure that the control knob is in position 1.
- If after heating, the drink is not consumed immediately, turn the control knob in the position 2, in this way is maintained the temperature.
- To proceed to the rapid heating of the drink, turn the knob to position 3. The following are indicative of the times of heating.

Drink	Heating time requested up to ~40°C	
	Environment (~20 °C)	Refrigerator (~6 °C)
160ml bottle	6':20"	7':30"
250ml bottle	12':00	15':00"

The values shown in the table are purely indicative and should be considered only as an example because many factors can increase or decrease the heating time.

HOW TO USE

To use the appliance please follow here below instruction:

Home:

! When using the bottle warmer at home always and only use it with water. Do not use in "dry" condition (without water) as you risk damaging the bottle.

NOTE

- Please check if the power selector in the back side of the appliance is in HOME position.
- Please turn the control knob (4) to position ①.
- Connect the home power cable (11) to the appliance and fit it in a compatible power outlet.

! When HOME power is selected, the CAR power connector is covered and not accessible.

NOTE

- Pour water in the heater (2) making sure not to cross the MAX level. Usually from 40 ml. to 80 ml. are enough and it depends on the size of the bottle.
- Put the bottle in the warmer and turn the control knob to position ③. The HOME LED will light and the heating phase is started.

- After 5 - 7 minutes, check the temperature of the drink by pouring some drops on the back of his hand and then give the bottle to the baby.

- When you finish to use the appliance, please turn the control knob to position ① and disconnect the power cable from the main power.

! During the heating phase the HOME LED will lights on and off several times. Wait 5 - 7 minutes and check the temperature of the drink by pouring a few drops on the back of the hand.

NOTE

Car:

- Please check if the power selector in the back side of the appliance is in CAR position.
- Please turn the control knob (4) to position ①.
- Connect the CAR power cable (10) to the appliance and fit it in the CAR lighter outlet.

- Put the bottle in the warmer, without water and turn the control knob to position ③.

- After 10 - 15 minutes, check the temperature of the drink by pouring some drops on the back of his hand and then give the bottle to the baby.

- When you finish to use the appliance, please turn the control knob to position ① and disconnect the power cable from the main power.



NOTE

During the heating phase the CAR LED will lights on and off several times. Wait 10 - 15 minutes and check the temperature of the drink by pouring a few drops on the back of the hand.

CLEANING AND MAINTENANCE

To ensure proper operation it is recommended to clean periodically the appliance. Here below there are some guidelines on how to clean the bottle warmer:

- Unplug from main power and allow the device has cooled.
 - Pour any remaining water, if any, and clean the heating element with a soft and clean cloth.
 - Clean the external side with a soft, clean cloth dampened with water.
- To reduce sediment deposits will recommend using filtered water or previously boiled. For efficient operation it is recommended to remove any sediment of limestone every 4 weeks using white wine vinegar.



NOTE

Descalc the warmer using a mix of 50ml household vinegar and 100ml cold water, pouring the solution into the warmer. Leave the solution to work until the lime scale has been removed; do not operate the warmer during this time. Empty the warmer, rinse it out thoroughly and finally dry it with a cloth. Descalc the warmer approximately every four weeks.

WARNINGS

If you use small electric appliances or electronic devices, especially if children are present, it is important to follow carefully the safety precautions listed below:

- Do not leave the appliance unattended during operation and / or in the presence of children.
- Use the appliance on a flat surface and secured to prevent tipping or the leakage of water boiling inside.
- After use, disconnect the appliance from the main power and let it cool.
- Do not use the appliance in water or in places with high humidity (Example: bathing or swimming).
- Do not place the product near a bathtub or wells.
- Do not place the device near and / or soak in water and / or other similar liquids.
- If dropped in water or similar liquids, not groped to recover the device without first unplugging the power cord from the main power outlet.
- Before each use, carefully check that the device, the power cord and power outlet does not have suffered damage.
- Do not activate the appliance if:
 - The power cord or plug is damaged or tampered.
 - The appliance is dropped or visibly damaged.
 - The appliance was immersed in water or similar liquids.
- This device is intended for internal use. Do not use outdoors or in the presence of substances, sprays, aerosols or medical devices for the administration of oxygen.
- This device is not suitable for use in environments where there are mixtures of flammable anesthetics, oxygen or nitrous oxide.
- Do not modify the power cord or plug. Use appropriate adapters and / or converters comply with standards.
- Make sure the device is not exposed to direct sunlight or excessive heat.
- Inside the machine there are no spare parts, consumables and / or replaceable parts independently, so they groped any repairs.
- Make sure that the power cord is not a hindrance and danger to persons and to ensure in particular that does not touch or appears to be in close proximity to surfaces at high temperature, such as the kitchen stove or radiators for heating of the house.
- This appliance is not intended to be used by people, including children with physical disabilities, sensory and mental disabilities, or lack of experience or knowledge unless they are properly educated and trained to use the device by a competent person and responsible for their safety.

SERVICE

Every care has been taken in the realization of products, accessories provided in the box and documentation provided, so in case of problems it is advisable to repeat the operations by faithfully following the instructions in the manual. For further information on the help service visit the website www.nuvitababy.com.

WARRANTY – TERMS & CONDITIONS

In accordance with current regulations, the product is guaranteed 24 months (legal guarantee) against defects in materials or manufacturing starting from the date stated in the receipt.

Excluded from the legal guarantee of 24 months are the parties identified as "consumable" (e.g., batteries, brush heads or parts subject to wear).

The legal guarantee of 24 months is void if:

1. The product has undergone aesthetic damage due to improper use not in accordance with instructions in the manual.
2. This product has been modified and / or tampered with.
3. The cause of the failure was due to poor maintenance of the individual components and/or accessories and/or supplies (e.g. oxidation and/or scaling due to the retention of water or other liquids, sediment blocking the sensor, leak of corrosive liquid from batteries.)

The following is excluded from the legal guarantee of 24 months:

1. Costs related to replacements and/or repair of parts subject to wear or costs for ordinary maintenance of the product.
2. The costs and risks involved in transporting the product to and from the store where you purchased or otherwise authorized collection centre to receive the products under warranty.
3. Damage caused by or resulting from improper installation or improper use not in accordance with the directions in the instruction manual.
4. Damage due to natural disasters, accidental events or adverse conditions not compatible with the product.
5. Defects that have a negligible effect on product performance.

The manufacturer, distributor and all the parties involved in the sale do not assume any liability for losses and economic damage from any malfunction of the product. In accordance with current regulations the manufacturer, distributor and all the parties involved in the sale are not responding in any case for damages, including direct, indirect ones, loss of net income, loss of savings and additional damage and other details consequences going beyond the damage caused by the breach of warranty, contract, strict liability, wrongdoing or due to other causes, resulting from the use or inability to use the product and / or paper and electronic documents, including the lack of service.