

nuvita®
nuvitababy.com



0m+

- EN UV Steriliser
- IT Sterilizzatore UV
- ES Esterilizador UV
- FR Stérilisateur UV
- PT Esterilizador UV
- DE UV-Sterilisator
- GR Αποστειρωτής UV
- HU Sterilizáló UV
- PL Sterylizator UV
- SL Sterilizator UV

1556

- EN Instruction Manual
- IT Manuale Istruzioni d'Uso
- ES Manual de Instrucciones
- FR Manuel d'Utilisation
- PT Manual de Instruções
- DE Bedienungsanleitung
- GR Οδηγίες Χρήσης
- HU Használati Útmutató
- PL Instrukcja Obsługi
- SL Navodila za Uporabo

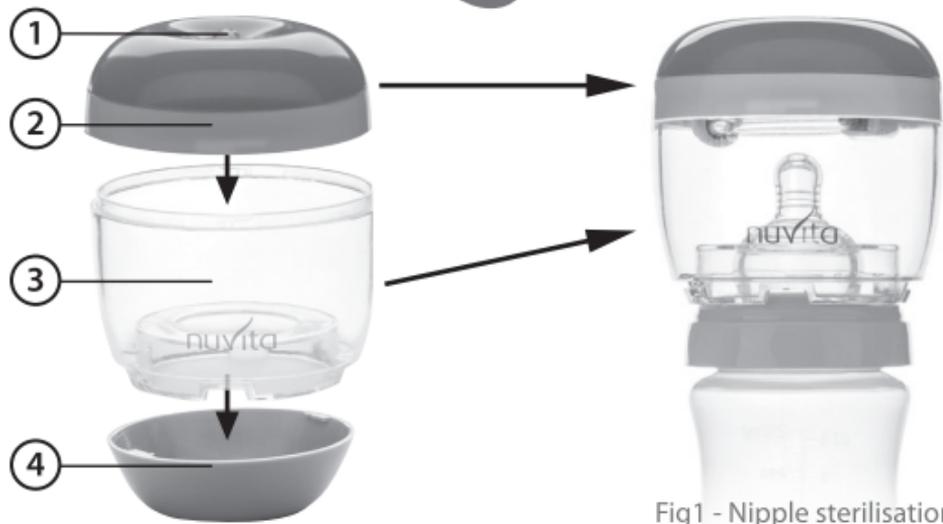


Fig1 - Nipple sterilisation

Description

1. Power ON button.
2. Upper Cover with batteries compartment.
3. Pacifier or nipple container.
4. Bottom cover.

Features

1. Power Source: 3 VDC (2x AAA batteries)
2. Power consumption: 0,9 Watt
3. Tube life: ~5.000 hours
4. UV strenght: ~500µW
5. Ozone density: 0,01 – 0,05 ppm
6. Environment temperature: 0°C-50°C (32°F-122°F)

How to use

1. Insert 2 x AAA batteries by checking the "+" and "-" symbols into the batteries compartment.
2. Place the pacifier in the container by opening upper cover.
3. Close upper cover then press for 3 seconds the power ON button. The red led will flashing (safety mode).
4. Press the power ON button again, the UV lamp will light ON and the sterilizer process will take around 2 minutes (± 20 sec).
- 5.

To sterilize the nipple (max 45mm diameter) remove the bottom cover and

- put the device directly on the bottle (Fig.1) then repeat step 3 and 4.

When the sterilizer process finishes, the UV lamp will shutdown automatically.

Warning

Before installing and using the appliance read the instruction manual carefully and retain it for future reference.


- The sterilizer is an electronic device, do not immerse in water or other liquids and do not clean the UV lamp with water or with other detergents.
- This device is not a toy. Keep away from children.
- UV light may be harmful to eyes and skin and therefore do not expose and do not look directly the UV lamp during operation.
- This appliance was designed to sterilize cleaned pacifiers and nipples by exposing to UV rays. It is recommended to not use the appliance for different purposes than intended use. It could may cause damage or injury.
- Do not use the appliance in case:
 - The UV lamp is damaged.
 - The appliance is visibly damaged.
 - The appliance is not working properly.
- For cleaning do not use strong detergents or solvents. Use only a soft cloth, dry and clean.

- This appliance is not intended to be used by people, including children with physical disabilities, sensory and mental disabilities, or lack of experience or knowledge unless they are properly educated and trained to use the appliance by a competent person and responsible for their safety.

Warning

- If not used for long periods, please remove the batteries to avoid leakage of corrosive liquid.
- To ensure proper and regularly operation of the appliance clean it with a soft and dry cloth or with a cotton swab.

The symbol on this product means that it is an electronic product and following the European directive 2002/96/CE the electronic products have to be dispose on your local recycling centre for safe treatment.





Imported and distributed by:
Anteprima Brands International Ltd.
Malta - Europe